





HDBaseT Extension Card Installation Guide


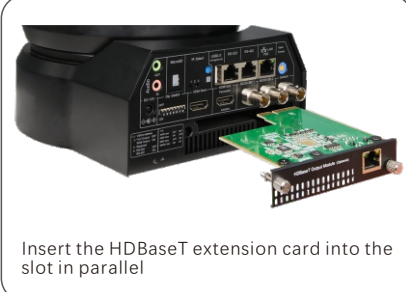
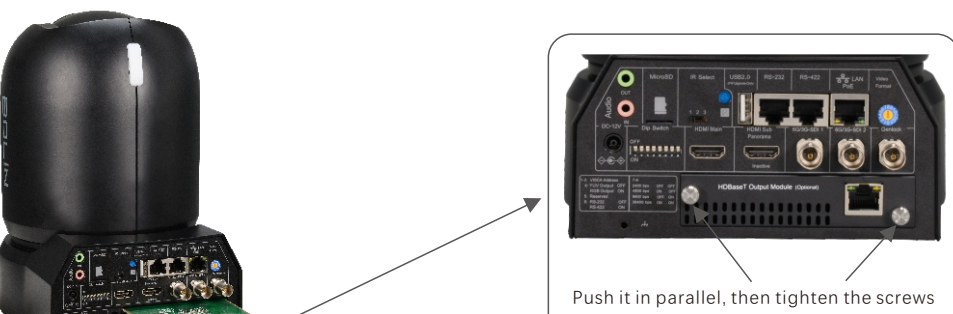
1. HDBaseT Extension Card Installation Steps


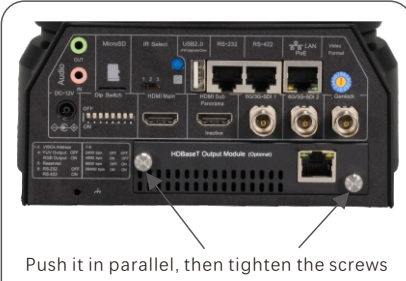
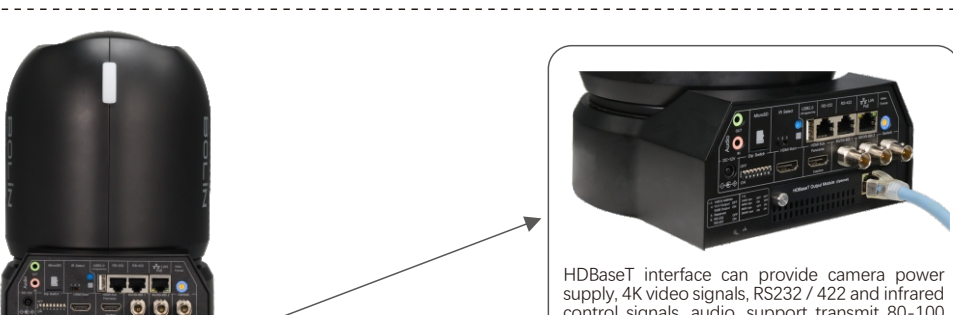
⚠ Note:

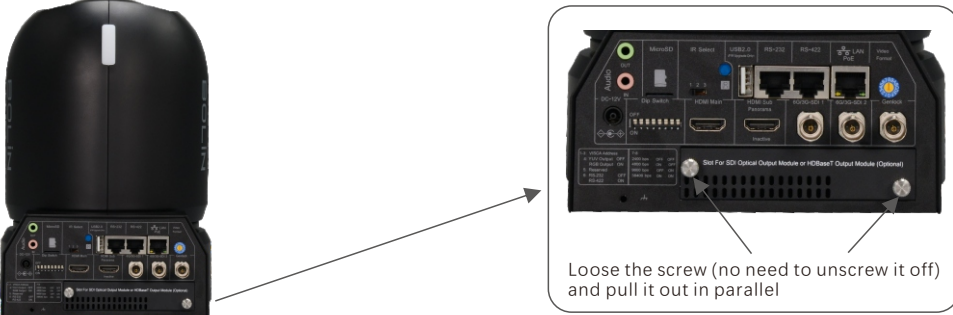

Must be operated in the power-off status when installing the HDBaseT extension card

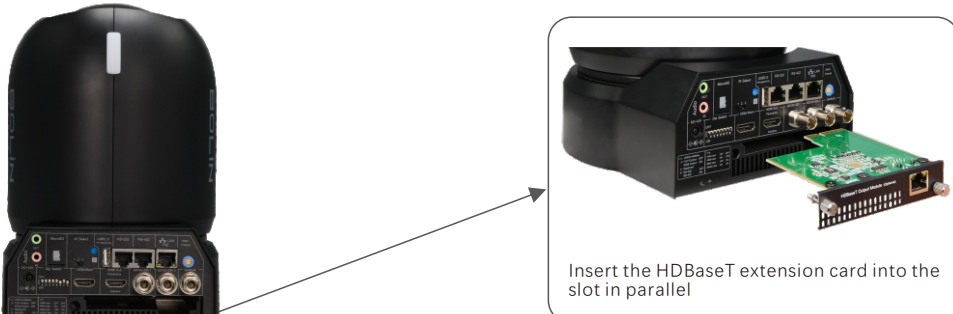- 

1.  
Loose the screw (no need to unscrew it off) and pull it out in parallel
- 

2.  
Insert the HDBaseT extension card into the slot in parallel
- 

3.  
Push it in parallel, then tighten the screws
- 

4.  
HDBaseT interface can provide camera power supply, 4K video signals, RS232 / 422 and infrared control signals, audio. support transmit 80-100 meters via a CAT5e / 6A network cable

2. HDBaseT extension card suitable for model

- BC-4K912S-S6MN