


# HDBaseT Extension Card Installation Guide

## 1. HDBaseT Extension Card Installation Steps


**⚠ Note:**

Must be operated in the power-off status when installing the HDBaseT extension card


- ①

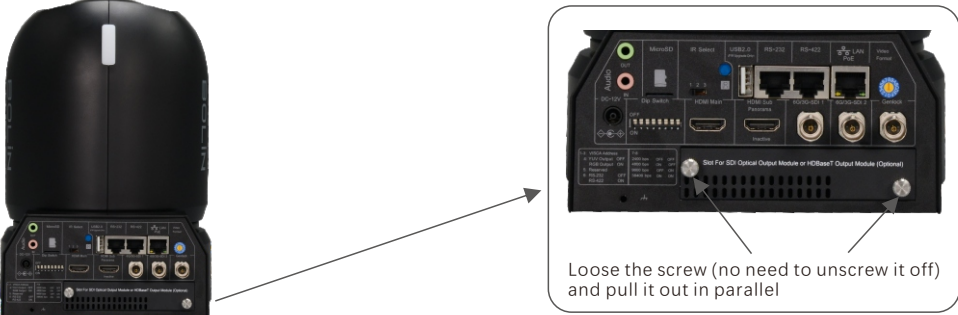


Loose the screw (no need to unscrew it off) and pull it out in parallel
- ②

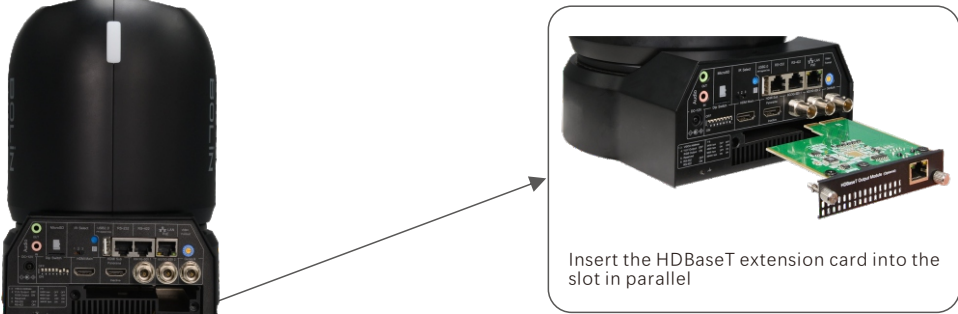

Insert the HDBaseT extension card into the slot in parallel
- ③

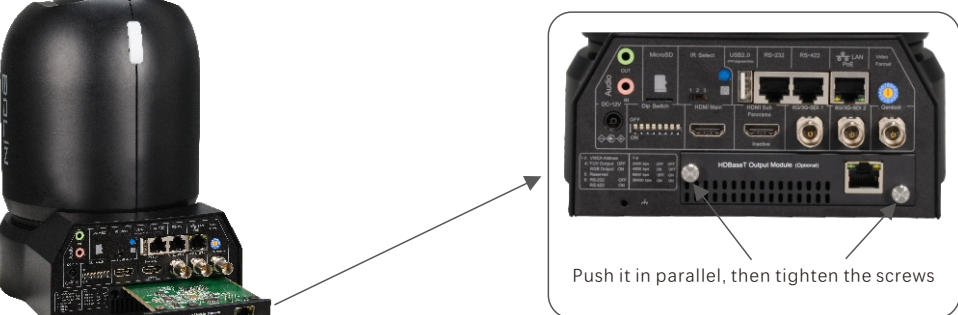

Push it in parallel, then tighten the screws
- ④

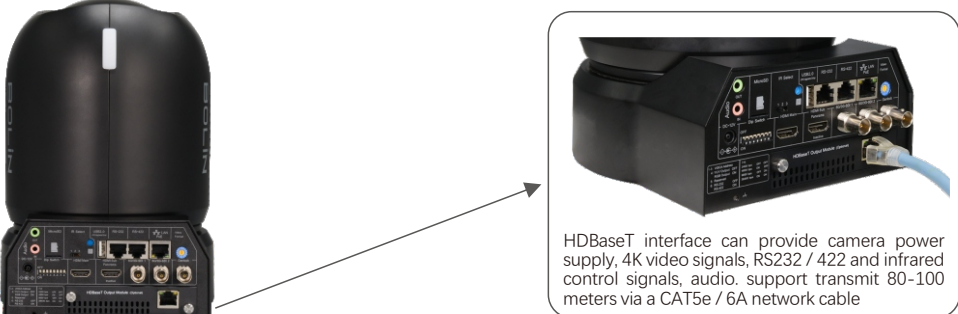

HDBaseT interface can provide camera power supply, 4K video signals, RS232 / 422 and infrared control signals, audio. support transmit 80-100 meters via a CAT5e / 6A network cable

## 2. HDBaseT extension card suitable for model

- BC-4K912S-S6MN